

# TK003

## OPEL

Astra J 1.3 CDTi 66KW(90PS/HP) - 1248cc - Двигатель A13DTE	(11/09-)	Boite 6T45
Astra J 1.3 CDTi 70KW(93PS/HP) - 1248cc - Двигатель A 13 DTE	(06/12-)	Boite 6T45
Astra J 1.4 16V 64KW(87PS/HP) - 1398cc - Двигатель A14XEL	(11/09-)	Boite 6T45
Astra J 1.4 16V 74KW(100PS/HP) - 1398cc - Двигатель A14XER	(11/09-)	Boite 6T45
Astra J 1.4 16V Turbo 103KW(140PS/HP) - 1364cc - Двигатель A14NET, B14NET	(11/09-)	Boite 6T45
Astra J 1.4 16V Turbo 88KW(120PS/HP) - 1364cc - Двигатель A14NEL, B14NEL	(10/10-)	Boite 6T45
Astra J 1.6 16V 147KW(168PS/HP) - 1598cc - Двигатель A16SHT, B16SHT, D16SHT	(07/13-)	Boite 6T45
Astra J 1.6 16V 85KW(115PS/HP) - 1598cc - Двигатель A16XER	(11/09-)	Boite 6T45
Astra J 1.6 16V Turbo 132KW(180PS/HP) - 1598cc - Двигатель A16LET	(11/09-)	Boite 6T45
Astra J 1.6 CDTi 100KW(153PS/HP) - 1598cc - Двигатель B16DTH	(07/14-)	Boite 6T45
Astra J 1.6 CDTi 81KW(110PS/HP) - 1598cc - Двигатель B16DTL	(07/14-)	Boite 6T45
Astra J 1.6 SIDI 125KW(168PS/HP) - 1598cc - Двигатель A16XHT, B16SHL	(12/12-)	Boite 6T45
Astra J 1.7 CDTi 81KW(110PS/HP) - 1686cc - Двигатель A17DTC, A17DTE, A17DTJ	(11/09-)	Boite 6T45
Astra J 1.7 CDTi 96KW(131PS/HP) - 1686cc - Двигатель A 17 DTF, A17DTS	(07/11-10/15)	Boite 6T45
Astra J 1.7 CDTi 92KW(125PS/HP) - 1686cc - Двигатель A17DTR	(11/09-)	Boite 6T45
Astra J 1.8 103KW(140PS/HP) - 1796cc - Двигатель A18XER	(11/10-10/15)	Boite 6T45
Astra J 2.0 Biturbo CDTi 143KW(194PS/HP) - 1956cc - Двигатель A20DTR	(12/12-)	Boite 6T45
Astra J 2.0 CDTi 118KW(160PS/HP) - 1956cc - Двигатель A20DTH	(11/09-)	Boite 6T45
Astra J 2.0 Turbo 206KW(280PS/HP) - 1998cc - Двигатель A20NFT, B20NFT	(04/12-)	Boite 6T45
Astra K 1.0 Turbo 77KW(105PS/HP) - 999cc - Двигатель B10XFL	(06/15-)	Boite 6T45
Astra K 1.2 Turbo 107KW(145PS/HP) - 1199cc - Двигатель F12SHR	(08/19-)	Boite 6T45
Astra K 1.2 Turbo 96KW(131PS/HP) - 1199cc - Двигатель F12SHT	(08/19-)	Boite 6T45
Astra K 1.2 Turbo 81KW(110PS/HP) - 1199cc - Двигатель F12SHL	(08/19-)	Boite 6T45
Astra K 1.4 CNG 81KW(110PS/HP) - 1399cc - Двигатель B14XNT	(10/17-)	Boite 6T45
Astra K 1.4 Turbo 74KW(101PS/HP) - 1399cc - Двигатель B14XE	(06/15-)	Boite 6T45
Astra K 1.4 Turbo 110KW(150PS/HP) - 1399cc - Двигатель B14XFT	(06/15-)	Boite 6T45

Astra K 1.4 Turbo 92KW(125PS/HP) - 1399cc - Двигатель B14XFL	(06/15-)	Boite 6T45
Astra K 1.4 Turbo 107KW(145PS/HP) - 1342cc - Двигатель F14SHL, F14SHT	(08/19-)	Boite 6T45
Astra K 1.5 CDTi 77KW(105PS/HP) - 1496cc - Двигатель D15DVC, F15DVC	(08/19-)	Boite 6T45
Astra K 1.5 CDTi 90KW(122PS/HP) - 1496cc - Двигатель D15DVH, F15DVH	(08/19-)	Boite 6T45
Astra K 1.6 BiTurbo 118KW(160PS/HP) - 1598cc - Двигатель D16DTR	(08/18-)	Boite 6T45
Astra K 1.6 CDTi 118KW(160PS/HP) - 1598cc - Двигатель B16DTR	(11/15-)	Boite 6T45
Astra K 1.6 CDTi 100KW(136PS/HP) - 1598cc - Двигатель B16DTH	(06/15-)	Boite 6T45
Astra K 1.6 CDTi 81KW(110PS/HP) - 1598cc - Двигатель B16DTU	(06/15-)	Boite 6T45
Astra K 1.6 CDTi 70KW(95PS/HP) - 1598cc - Двигатель B16DTE	(06/15-)	Boite 6T45
Astra K 1.6 Turbo 147KW(200PS/HP) - 1598cc - Двигатель B16SHT	(11/15-)	Boite 6T45
Cascada 1.4 88KW(120PS/HP) - 1364cc - Двигатель A14NEL	(04/13-)	Boite 6T45
Cascada 1.4 Turbo 103KW(140PS/HP) - 1364cc - Двигатель A14NET, B14NET	(04/13-)	Boite 6T45
Cascada 1.6 147KW(196PS/HP) - 1598cc - Двигатель A16SHT	(11/13-)	Boite 6T45
Cascada 1.6 100KW(136PS/HP) - 1598cc - Двигатель D16SHJ	(09/18-)	Boite 6T45
Cascada 1.6 SIDI 125KW(170PS/HP) - 1598cc - Двигатель A16XHT	(04/13-)	Boite 6T45
Cascada 2.0 CDTi 125KW(170PS/HP) - 1956cc - Двигатель B20DTH	(07/15-)	Boite 6T45
Cascada 2.0 CDTi 143KW(192PS/HP) - 1956cc - Двигатель A20DTR	(04/13-)	Boite 6T45
Cascada 2.0 CDTi 121KW(163PS/HP) - 1956cc - Двигатель A20DTH	(04/13-)	Boite 6T45
Insignia A 1.4 103KW(138PS/HP) - 1364cc - Двигатель A14NET	(06/11-03/17)	Boite 6T45
Insignia A 1.6 85KW(115PS/HP) - 1598cc - Двигатель A16XER	(11/08-03/17)	Boite 6T45
Insignia A 1.6 16V 125KW(168PS/HP) - 1598cc - Двигатель A16XHT, B16SHL	(06/13-03/17)	Boite 6T45
Insignia A 1.6 CDTi 100 100KW(136PS/HP) - 1598cc - Двигатель B16DTH	(07/15-03/17)	Boite 6T45
Insignia A 1.6 CDTi 120 88KW(120PS/HP) - 1598cc - Двигатель B16DTJ	(07/15-03/17)	Boite 6T45
Insignia A 1.6 Turbo 132KW(180PS/HP) - 1598cc - Двигатель A16LET	(11/08-03/17)	Boite 6T45
Insignia A 1.8 103KW(140PS/HP) - 1796cc - Двигатель A18XER, B18XER	(11/08-03/17)	Boite 6T45
Insignia A 2.0 Biturbo CDTi 143KW(195PS/HP) - 1956cc - Двигатель A20DTR	(03/12-03/17)	Boite 6T45
Insignia A 2.0 CDTi 96KW(130PS/HP) - 1956cc - Двигатель A20DTJ	(11/08-03/17)	Boite 6T45
Insignia A 2.0 CDTi 68KW(95PS/HP) - 1956cc - Двигатель A20DTE	(06/13-03/17)	Boite 6T45
Insignia A 2.0 CDTi 88/103KW(120/140PS/HP) - 1956cc - Двигатель A20DTE	(03/12-03/17)	Boite 6T45
Insignia A 2.0 CDTi 125KW(170PS/HP) - 1956cc - Двигатель B20DTH	(11/14-03/17)	Boite 6T45
Insignia A 2.0 CDTi	(11/08-03/17)	

81KW(110PS/HP) - 1956cc - Двигатель A20DTC		Boite 6T45
Insignia A 2.0 CDTi	(11/08-12/11)	
140KW(190PS/HP) - 1956cc - Двигатель A20DTR		Boite 6T45
Insignia A 2.0 CDTi	(11/08-03/17)	
118KW(160PS/HP) - 1956cc - Двигатель A20DTH		Boite 6T45
Insignia A 2.0 Turbo	(11/08-03/17)	
162KW(220PS/HP) - 1998cc - Двигатель A20NFT, A20NHT		Boite 6T45
Insignia A 2.0 Turbo	(04/14-03/17)	
184KW(250PS/HP) - 1956cc - Двигатель A20NHT, B20NHT		Boite 6T45
Insignia A 2.8 V6 Turbo	(11/08-03/17)	
239KW(325PS/HP) - 2792cc - Двигатель A28NER, B28NER		Boite 6T45
Insignia A 2.8 V6 Turbo	(11/08-03/17)	
191KW(260PS/HP) - 2792cc - Двигатель A28NET		Boite 6T45
Insignia B 1.5 140	(03/17-)	
103KW(140PS/HP) - 1490cc - Двигатель B15SFL, B15XHL, B15XFL, D15SFL		Boite 6T45
Insignia B 1.5 165	(03/17-)	
121KW(165PS/HP) - 1490cc - Двигатель B15SFT		Boite 6T45
Insignia B 1.6 CDTi 110	(03/17-)	
81KW(110PS/HP) - 1598cc - Двигатель B16DTE, D16DTE, D16DTN		Boite 6T45
Insignia B 1.6 CDTi 135	(03/17-)	
100KW(136PS/HP) - 1598cc - Двигатель B16DTH		Boite 6T45
Insignia B 1.6 Turbo	(06/18-)	
147KW(200PS/HP) - 1598cc - Двигатель D16SHT		Boite 6T45
Insignia B 2.0 CDTi	(03/17-)	
125KW(170PS/HP) - 1956cc - Двигатель B20DTH, D20DTH		Boite 6T45
Insignia B 2.0 CDTi	(01/18-)	
154KW(210PS/HP) - 1956cc - Двигатель D20DTR		Boite 6T45
Insignia B 2.0 Turbo	(03/17-)	
191KW(260PS/HP) - 1998cc - Двигатель B20NFT		Boite 6T45
Mokka / Mokka X 1.4	(06/12-)	
103KW(140PS/HP) - 1364cc - Двигатель A14NET, B14NET		Boite 6T45
Mokka / Mokka X 1.4	(06/16-)	
112KW(150PS/HP) - 1399cc - Двигатель B14XFT		Boite 6T45
Mokka / Mokka X 1.6	(06/12-)	
85KW(115PS/HP) - 1598cc - Двигатель A16XER		Boite 6T45
Mokka / Mokka X 1.6 CDTi	(06/15-)	
81KW(110PS/HP) - 1598cc - Двигатель B16DTU, D16DTN		Boite 6T45
Mokka / Mokka X 1.6 CDTi	(01/15-)	
100KW(136PS/HP) - 1598cc - Двигатель A16DTH, B16DTH, D16DTH		Boite 6T45
Mokka / Mokka X 1.7 CDTi	(06/12-)	
96KW(131PS/HP) - 1686cc - Двигатель A17DTS		Boite 6T45
Mokka / Mokka X 1.8	(06/12-)	
96KW(131PS/HP) - 1796cc - Двигатель A18XER		Boite 6T45
Zafira I 1.6 16V	(02/99-07/05)	
74KW(100PS/HP) - 1598cc - Двигатель X16XEL, Z16XE		Boite 6T45
Zafira I 1.8 16V	(02/99-12/00)	
85KW(115PS/HP) - 1796cc - Двигатель X18XE1		Boite 6T45
Zafira I 1.8i 16V	(10/00-07/05)	
92KW(125PS/HP) - 1796cc - Двигатель Z18XE		Boite 6T45
Zafira I 2.0 16V Turbo	(11/01-07/05)	
141KW(192PS/HP) - 1998cc - Двигатель Z20LET		Boite 6T45
Zafira I 2.0 16V Turbo	(12/02-07/05)	
147KW(200PS/HP) - 1998cc - Двигатель Z20ZET		Boite 6T45
Zafira I 2.0 Di 16V	(02/99-12/00)	
60KW(82PS/HP) - 1995cc - Двигатель X20DTL		Boite 6T45
Zafira I 2.0 DTi 16V	(10/00-07/05)	
74KW(100PS/HP) - 1995cc - Двигатель X20DTH, Y20DTH		Boite 6T45
Zafira I 2.2 16V	(01/01-07/05)	
108KW(147PS/HP) - 2198cc - Двигатель Z22SE		Boite 6T45
Zafira I 2.2 DTi 16V	(01/02-07/05)	
92KW(125PS/HP) - 2171cc - Двигатель Y22DTR		Boite 6T45

Zafira II 1.6 16V 77KW(105PS/HP) - 1598cc - Двигатель Z16XE	(07/05-12/09)	Boite 6T45
Zafira II 1.9 CDTi 110KW(150PS/HP) - 1910cc - Двигатель Z19DTH	(07/05-)	Boite 6T45
Zafira II 2.0 16V Turbo 147KW(200PS/HP) - 1998cc - Двигатель Z20LER	(07/05-12/10)	Boite 6T45
Zafira III (P12) 1.4 88KW(120PS/HP) - 1364cc - Двигатель A14NEL	(10/11-)	Boite 6T45
Zafira III (P12) 1.4 LPG 103KW(138PS/HP) - 1364cc - Двигатель A14NET	(10/11-)	Boite 6T45
Zafira III (P12) 1.6 100KW(136PS/HP) - 1598cc - Двигатель D16SHJ	(09/18-)	Boite 6T45
Zafira III (P12) 1.6 16V 125KW(167PS/HP) - 1598cc - Двигатель A16XHT	(12/12-)	Boite 6T45
Zafira III (P12) 1.6 16V 147KW(150PS/HP) - 1598cc - Двигатель A16SHT	(07/13-)	Boite 6T45
Zafira III (P12) 1.6 CDTi 88KW(120PS/HP) - 1598cc - Двигатель B16DTJ	(06/14-)	Boite 6T45
Zafira III (P12) 1.6 CDTi EcoFlex 100KW(134PS/HP) - 1598cc - Двигатель B16DTH	(03/13-)	Boite 6T45
Zafira III (P12) 1.6 CNG 110KW(147PS/HP) - 1598cc - Двигатель A16XNT	(10/11-)	Boite 6T45
Zafira III (P12) 1.8 103KW(140PS/HP) - 1796cc - Двигатель A18XER	(10/11-)	Boite 6T45
Zafira III (P12) 1.8 85KW(115PS/HP) - 1796cc - Двигатель A18XEL	(10/11-)	Boite 6T45
Zafira III (P12) 2.0 BiTurbo CDTi 143KW(194PS/HP) - 1956cc - Двигатель A20DTR	(10/11-)	Boite 6T45
Zafira III (P12) 2.0 CDTi 121KW(162PS/HP) - 1956cc - Двигатель A20DTH	(10/11-)	Boite 6T45
Zafira III (P12) 2.0 CDTi 96KW(129PS/HP) - 1956cc - Двигатель A20DT, Y20DTJ, Z20DTJ	(10/11-)	Boite 6T45
Zafira III (P12) 2.0 CDTi 81KW(109PS/HP) - 1956cc - Двигатель A20DTL	(10/11-)	Boite 6T45
Zafira III (P12) 2.0 CDTi 125KW(170PS/HP) - 1956cc - Двигатель B20DTH	(01/15-)	Boite 6T45

## VAUXHALL

Astra Mk VI 1.3 CDTi 70KW(94PS/HP) - 1248cc - Двигатель A13DTE	(11/09-10/15)	Boite 6T45
Astra Mk VI 1.4 16V 64KW(87PS/HP) - 1399cc - Двигатель A14XEL	(11/09-10/15)	Boite 6T45
Astra Mk VI 1.4 16V 74KW(100PS/HP) - 1399cc - Двигатель A14XER, B14XER	(11/09-10/15)	Boite 6T45
Astra Mk VI 1.4 16V Turbo 103KW(140PS/HP) - 1399cc - Двигатель A14NET, B14NET	(11/09-10/15)	Boite 6T45
Astra Mk VI 1.4 Turbo 88KW(120PS/HP) - 1364cc - Двигатель A14NEL, B14NEL	(10/11-10/15)	Boite 6T45
Astra Mk VI 1.6 16V 85KW(115PS/HP) - 1599cc - Двигатель A16XER, B16XER	(11/09-10/15)	Boite 6T45
Astra Mk VI 1.6 16V Turbo 132KW(180PS/HP) - 1598cc - Двигатель A16LET	(11/09-10/15)	Boite 6T45
Astra Mk VI 1.6 16V Turbo 147KW(196PS/HP) - 1598cc - Двигатель A16SHT, B16SHT, D16SHT	(09/13-10/15)	Boite 6T45
Astra Mk VI 1.6 CDTi 100KW(136PS/HP) - 1598cc - Двигатель B16DTH	(11/13-10/15)	Boite 6T45
Astra Mk VI 1.6 CDTi 81KW(110PS/HP) - 1598cc - Двигатель B16DTL	(07/14-10/15)	Boite 6T45
Astra Mk VI 1.7 CDTi 96KW(128PS/HP) - 1686cc - Двигатель A17DTF, A17DTS	(06/11-10/15)	Boite 6T45

Astra Mk VI 1.7 CDTi 81KW(110PS/HP) - 1686cc - Двигатель A17DTC, A17DTE, A17DTJ	(06/12-10/15)	Boite 6T45
Astra Mk VI 1.7 CDTi 74KW(100PS/HP) - 1686cc - Двигатель A17DTL	(11/09-10/15)	Boite 6T45
Astra Mk VI 1.7 CDTi 81KW(110PS/HP) - 1686cc - Двигатель A17DTJ	(11/09-10/15)	Boite 6T45
Astra Mk VI 1.7 CDTi 92KW(125PS/HP) - 1686cc - Двигатель A17DTR	(11/09-10/15)	Boite 6T45
Astra Mk VI 2.0 Biturbo CDTi 143KW(194PS/HP) - 1956cc - Двигатель A20DTR	(12/12-10/15)	Boite 6T45
Astra Mk VI 2.0 CDTi 121KW(165PS/HP) - 1956cc - Двигатель A20DTH	(08/11-10/15)	Boite 6T45
Astra Mk VI 2.0 CDTi 118KW(160PS/HP) - 1956cc - Двигатель A20DTH	(11/09-06/11)	Boite 6T45
Astra Mk VI 2.0 VXR 206KW(280PS/HP) - 1998cc - Двигатель A20NFT, B20NFT	(04/12-10/15)	Boite 6T45
Astra Mk VII 1.0 Turbo 77KW(105PS/HP) - 999cc - Двигатель B10XFL	(06/15-)	Boite 6T45
Astra Mk VII 1.2 Turbo 96KW(131PS/HP) - 1199cc - Двигатель F12SHT	(08/19-)	Boite 6T45
Astra Mk VII 1.2 Turbo 81KW(110PS/HP) - 1199cc - Двигатель F12SHL	(08/19-)	Boite 6T45
Astra Mk VII 1.2 Turbo 107KW(145PS/HP) - 1199cc - Двигатель F12SHR	(08/19-)	Boite 6T45
Astra Mk VII 1.4 74KW(101PS/HP) - 1398cc - Двигатель B14XE	(06/15-)	Boite 6T45
Astra Mk VII 1.4 Turbo 110KW(150PS/HP) - 1398cc - Двигатель B14XFT, D14XFT	(06/15-)	Boite 6T45
Astra Mk VII 1.4 Turbo 107KW(145PS/HP) - 1342cc - Двигатель F14SHL, F14SHT	(08/19-)	Boite 6T45
Astra Mk VII 1.4 Turbo 92KW(125PS/HP) - 1398cc - Двигатель B14XFL, D14XFL	(06/15-)	Boite 6T45
Astra Mk VII 1.5 CDTi 90KW(122PS/HP) - 1342cc - Двигатель D15DVH, F15DVH	(08/19-)	Boite 6T45
Astra Mk VII 1.5 CDTi 77KW(105PS/HP) - 1342cc - Двигатель D15DVC, F15DVC	(08/19-)	Boite 6T45
Astra Mk VII 1.6 BiTurbo 110KW(150PS/HP) - 1598cc - Двигатель D16DTR	(08/18-)	Boite 6T45
Astra Mk VII 1.6 CDTi 70KW(95PS/HP) - 1598cc - Двигатель B16DTE, B16DTC	(06/15-)	Boite 6T45
Astra Mk VII 1.6 CDTi 100KW(136PS/HP) - 1598cc - Двигатель B16DTH, D16DTH	(06/15-)	Boite 6T45
Astra Mk VII 1.6 CDTi 81KW(110PS/HP) - 1598cc - Двигатель B16DTE, B16DTU, D16DTI	(06/15-)	Boite 6T45
Astra Mk VII 1.6 CDTi 118KW(160PS/HP) - 1598cc - Двигатель B16DTR	(11/15-)	Boite 6T45
Astra Mk VII 1.6 Turbo 147KW(200PS/HP) - 1598cc - Двигатель B16SHT, D16SHT	(11/15-)	Boite 6T45
Cascada 1.4 88KW(120PS/HP) - 1364cc - Двигатель A14NEL	(04/13-)	Boite 6T45
Cascada 1.6 125KW(170PS/HP) - 1598cc - Двигатель A16XHT	(04/13-)	Boite 6T45
Cascada 1.6 147KW(195PS/HP) - 1598cc - Двигатель A16SHT	(11/13-)	Boite 6T45
Cascada 2.0 CDTi 143KW(192PS/HP) - 1956cc - Двигатель A20DTR	(04/13-)	Boite 6T45
Cascada 2.0 CDTi 125KW(170PS/HP) - 1956cc - Двигатель B20DTH	(07/15-)	Boite 6T45
Cascada 2.0 CDTi 121KW(163PS/HP) - 1956cc - Двигатель A20DTH	(04/13-)	Boite 6T45
Insignia Mk I 1.4 LPG / Turbo EcoFlex	(04/11-)	

103KW(138PS/HP) - 1364cc - Двигатель A14NET/B14NET		Boite 6T45
<b>Insignia Mk I 1.6</b>	(11/08-)	
85KW(115PS/HP) - 1598cc - Двигатель A16XER		Boite 6T45
<b>Insignia Mk I 1.6 CTDI</b>	(07/15-05/17)	
100KW(136PS/HP) - 1598cc - Двигатель B16DTH		Boite 6T45
<b>Insignia Mk I 1.6 SIDI</b>	(06/13-)	
125KW(168PS/HP) - 1598cc - Двигатель A16XHT, B16SHL		Boite 6T45
<b>Insignia Mk I 1.6 Turbo</b>	(11/08-)	
132KW(180PS/HP) - 1598cc - Двигатель A16LET		Boite 6T45
<b>Insignia Mk I 1.8</b>	(11/08-09/13)	
103KW(140PS/HP) - 1796cc - Двигатель A18XER, B18XER		Boite 6T45
<b>Insignia Mk I 2.0 Biturbo CDTi</b>	(03/12-)	
143KW(195PS/HP) - Двигатель A20DTR		Boite 6T45
<b>Insignia Mk I 2.0 CDTi</b>	(11/08-)	
118/120KW(160/163PS/HP) - 1956cc - Двигатель A20DTH		Boite 6T45
<b>Insignia Mk I 2.0 CDTi</b>	(07/08-05/17)	
81KW(110PS/HP) - 1956cc - Двигатель A20DTC		Boite 6T45
<b>Insignia Mk I 2.0 CDTi</b>	(11/08-)	
140KW(190PS/HP) - 1956cc - Двигатель A20DTR		Boite 6T45
<b>Insignia Mk I 2.0 CDTi</b>	(11/14-)	
125KW(170PS/HP) - 1956cc - Двигатель B20DTH		Boite 6T45
<b>Insignia Mk I 2.0 CDTi</b>	(11/08-)	
96KW(130PS/HP) - 1956cc - Двигатель A20DTJ		Boite 6T45
<b>Insignia Mk I 2.0 CDTi ECOTEC</b>	(03/12-)	
88/103KW(120/140PS/HP) - 1956cc - Двигатель A20DTE		Boite 6T45
<b>Insignia Mk I 2.0 Turbo</b>	(11/08-)	
162KW(220PS/HP) - 1998cc - Двигатель A20NHT		Boite 6T45
<b>Insignia Mk I 2.0 Turbo</b>	(04/14-)	
184KW(250PS/HP) - 1998cc - Двигатель A20NHT, B20NHT		Boite 6T45
<b>Insignia Mk I 2.8 V6 Turbo</b>	(11/08-)	
239KW(325PS/HP) - 2792cc - Двигатель A28NER, B28NER		Boite 6T45
<b>Insignia Mk I 2.8 V6 Turbo</b>	(11/08-)	
191KW(260PS/HP) - 2792cc - Двигатель A28NET		Boite 6T45
<b>Insignia Mk II 1.5 ECOTEC 140</b>	(03/17-)	
103KW(140PS/HP) - 1490cc - Двигатель B15SFL, B15XHL, B15XFL, D15SFL		Boite 6T45
<b>Insignia Mk II 1.5 ECOTEC 165</b>	(03/17-)	
121KW(165PS/HP) - 1490cc - Двигатель B15SFT, D15SFT, D15XHT		Boite 6T45
<b>Insignia Mk II 1.6 CTDI ECOTEC 110</b>	(03/17-)	
81KW(110PS/HP) - 1598cc - Двигатель B16DTE, D16DTE, D16DTN		Boite 6T45
<b>Insignia Mk II 1.6 CTDI ECOTEC 135</b>	(03/17-)	
100KW(136PS/HP) - 1598cc - Двигатель B16DTH, D16DTH		Boite 6T45
<b>Insignia Mk II 1.6 Turbo</b>	(06/18-)	
147KW(200PS/HP) - 1598cc - Двигатель D16SHT		Boite 6T45
<b>Insignia Mk II 2.0 CDTi ECOTEC 170</b>	(03/17-)	
125KW(170PS/HP) - 1956cc - Двигатель B20DTH, D20DTH		Boite 6T45
<b>Insignia Mk II 2.0 CDTi ECOTEC 210</b>	(07/17-)	
154KW(209PS/HP) - 1956cc - Двигатель D20DTR		Boite 6T45
<b>Insignia Mk II 2.0 ECOTEC</b>	(03/17-)	
191KW(260PS/HP) - 1998cc - Двигатель B20NFT		Boite 6T45
<b>Mokka / Mokka X 1.4</b>	(06/12-)	
103KW(140PS/HP) - 1364cc - Двигатель A14NET, B14NET, D14NET		Boite 6T45
<b>Mokka / Mokka X 1.4</b>	(06/16-)	
112KW(152PS/HP) - 1598cc - Двигатель B14XFT		Boite 6T45
<b>Mokka / Mokka X 1.6</b>	(06/12-)	
85KW(115PS/HP) - 1598cc - Двигатель A16XER, B16XER		Boite 6T45
<b>Mokka / Mokka X 1.6 CDTi</b>	(01/15-)	
100KW(134PS/HP) - 1598cc - Двигатель A16DTH, B16DTH, D16DTH		Boite 6T45
<b>Mokka / Mokka X 1.6 CDTi</b>	(06/15-)	
81KW(107PS/HP) - 1598cc - Двигатель B16DTN, B16DTU		Boite 6T45
<b>Mokka / Mokka X 1.7 CDTi</b>	(06/12-)	
96KW(131PS/HP) - 1686cc - Двигатель A17DTS		Boite 6T45

Zafira Mk III 1.4 88KW(118PS/HP) - 1364cc - Двигатель A14NEL	(10/11-08/18)	Boite 6T45
Zafira Mk III 1.4 LPG 103KW(138PS/HP) - 1364cc - Двигатель A14NET	(10/11-08/18)	Boite 6T45
Zafira Mk III 1.6 CDTi / Ecotec 100KW(134PS/HP) - 1598cc - Двигатель B16DTH	(03/13-08/18)	Boite 6T45
Zafira Mk III 1.6 CNG 110KW(147PS/HP) - 1598cc - Двигатель A16XNT	(10/11-08/18)	Boite 6T45
Zafira Mk III 1.6 SIDI 125KW(170PS/HP) - 1598cc - Двигатель A 16 XHT, B 16 SHL, D 16 SHL	(12/12-08/18)	Boite 6T45
Zafira Mk III 1.6 SIDI 147KW(200PS/HP) - 1598cc - Двигатель A16SHT	(07/13-08/18)	Boite 6T45
Zafira Mk III 1.8 103KW(140PS/HP) - 1796cc - Двигатель A18XER	(10/11-08/18)	Boite 6T45
Zafira Mk III 1.8 85KW(114PS/HP) - 1796cc - Двигатель A18XEL	(10/11-08/18)	Boite 6T45
Zafira Mk III 2.0 BiTurbo CDTi 143KW(194PS/HP) - 1956cc - Двигатель A20DTR	(10/11-08/18)	Boite 6T45
Zafira Mk III 2.0 CDTi 81KW(110PS/HP) - 1956cc - Двигатель A20DTL	(10/11-08/18)	Boite 6T45
Zafira Mk III 2.0 CDTi 96KW(130PS/HP) - 1956cc - Двигатель Y20DTJ	(10/11-08/18)	Boite 6T45
Zafira Mk III 2.0 CDTi 121KW(165PS/HP) - 1956cc - Двигатель A 20 DTH	(10/11-08/18)	Boite 6T45
Zafira Mk III 2.0 CDTi 125KW(168PS/HP) - 1956cc - Двигатель B20DTH	(01/15-08/18)	Boite 6T45