

TEK023

BMW

116i (E81/E87) 85KW(115PS/HP) - 1596cc - Motor N45B16A	(09/04-09/12)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
118i (E81/E87) 100KW(134PS/HP) - 1995cc - Motor N46NB20B	(03/07-09/12)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
118i (E81/E87) 95KW(129PS/HP) - 1995cc - Motor N46B20	(12/04-02/07)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
120i (E81/E87) 110KW(150PS/HP) - 1995cc - Motor N46B20	(09/04-02/07)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
120i (E81/E87) 115KW(154PS/HP) - 1995cc - Motor N46B20B, N46B20C	(03/07-12/11)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
125i (E82/E88) 160KW(218PS/HP) - 2996cc - Motor N52B30A	(03/08-09/12)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
130i (E81/E87) 195KW(265PS/HP) - 2996cc - Motor N52B30	(09/05-09/12)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
318i (E90/E91/E92/E93) 100KW(134PS/HP) - 1995cc - Motor N43B20A	(06/07-12/11)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
318i (E90/E91/E92/E93) 95KW(129PS/HP) - 1995cc - Motor N46B20	(09/05-08/07)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
318i (E90/E91/E92/E93) 105KW(143PS/HP) - 1995cc - Motor N46B20B	(09/07-12/11)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
320i (E90/E91/E92/E93) 115/120KW(154/161PS/HP) - 1995cc - Motor N43B20A	(06/07-12/11)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
320i (E90/E91/E92/E93) 110KW(150PS/HP) - 1995cc - Motor N46B20	(03/05-08/06)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
323 i (E90/E91/E92/E93) 140KW(190PS/HP) - 2497cc - Motor N52B25A	(09/06-07/08)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
323i (E90/E91/E92/E93) 127KW(173PS/HP) - 2497cc - Motor N52B25	(09/06-06/07)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
323i (E90/E91/E92/E93) 130KW(175PS/HP) - 2497cc - Motor N52B25A	(06/06-08/08)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
325i, Xi (E90/E91/E92/93) 160KW(218PS/HP) - 2497cc - Motor N52B25	(03/05-12/11)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
328i (E90/E91/E92/E93) 172KW(234PS/HP) - 2996cc - Motor N51B30A, N52B30A	(06/06-06/13)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
330i (E90/E91/E92/E93) 200KW(272PS/HP) - 2996cc - Motor N52B30A, N53B30A	(09/06-12/11)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
330i, Xi (E90/E91/E92/E93) 190KW(258PS/HP) - 2996cc - Motor N52B30	(03/05-12/11)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
X1 25 i (E84) 160KW(218PS/HP) - 2996cc - Motor N52B30A	(03/10-12/12)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
X1 28 i (E84) 190KW(258PS/HP) - 2996cc - Motor N52B30A	(10/09-02/11)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
X1 sDrive 18i (E84) 110KW(150PS/HP) - 1995cc - Motor N46 B20 B	(01/10-06/15)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
X3 2.5 si (E83) 160KW(218PS/HP) - 2497cc - Motor N52B25	(09/06-12/10)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
X3 2.5 si (E83) 155KW(211PS/HP) - 2497cc - Motor N52B25A, N52B25B	(08/06-08/08)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
X3 3.0 i (E83) 170KW(231PS/HP) - 2979cc - Motor M54B30	(01/04-08/06)	BoiteGA6L45R avtomatski menjalnik - 6.prestav
X3 3.0 si (E83) 200KW(272PS/HP) - 2996cc - Motor N52B30	(09/06-12/10)	BoiteGA6L45R avtomatski menjalnik - 6.prestav